

PARTYRIOT 410

DJ Boombox



Ba11



User Manual

Designed For Excellence.

www.iball.co.in

Thank you for choosing **PartyRiot 410 DJ Boombox**. Please read the user manual carefully before operation and save this user manual for further reference.

Note :

- *Please charge the product with power cord connected to the power supply output rated voltage of AC 220 - 240V 50/60Hz.*
- *Avoid the usage of this product at the high temperature and high humidity environment.*
- Please do not attempt to disassemble this product yourself, as it will result in voiding the warranty. For expert assistance, please contact our support team at 84400 45005 or feedback@iball.co.in.

To review our complete warranty terms and conditions, please click the link below

[**View Warranty Policy**](#)

To find your nearest authorized service center, please click the link below

[**Find a Service Center**](#)

Features :

- 180W RMS Power
- Max. 8h* Playtime
- Deep Bass
- Down Firing 20.32cm Woofer
- 3-Way Speaker
- Dual UHF Rechargeable Mic
- Supported Inputs (BT v5.3 | USB | AUX)
- True Wireless Duo (TWS)
- 5 RGB LED Modes
- LED Display
- 6.3mm Mic & Guitar Input
- X Bass EQ
- Music & Mic Controls
- Built in Battery

Specification :

Output Power (RMS)	: 180W
Driver Size	
Tweeter	: 6 cm x 2
MidRange	: 13.33 cm x 2
Woofer	: 20.32 cm x 1
Impedance	
Tweeter	: 8Ω
MidRange	: 4Ω
Woofer	: 4Ω
Frequency Response	: 35Hz - 15kHz

S/N Ratio	: >80dB
File Format Support(USB)	: MP3
Line Input	: 3.5mm Jack
Max Supported	
Memory Size (USB)	: 32GB
FM Frequency Range	: 87.5MHz - 108MHz
Charging Time	: 5h
Playback Time	: 8h*
BT Name	: iBall PartyRiot 410
BT Version	: v5.0
Product Dimension	: 31.8 x 72.5 cm (Dia x H)
Net Weight	: 11.14kg

**At 70% volume and LED On, Playtime will vary based on the user, music preference and volume level.*

Package Contents :

Speaker	: 1 U
Wireless Mic	: 2 U
Power Cord	: 1 U
Input Cable	: 1 U
QR Code Guide	: 1 U


Product Description :

Top Panel :



1. X Bass Button
2. RGB Mode Button
3. TWS Button
4. Mode Button
5. Previous Channel/Track
6. Play/Pause Button
7. Next Channel/Track
8. Master Volume Knob
9. LED Display

Rear Panel :

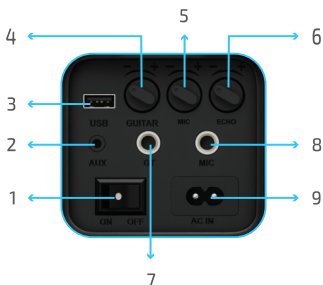

1. On/Off Switch
2. AUX Port
3. USB Port
4. Guitar Volume Knob
5. Mic Volume Knob
6. Echo Control Knob
7. 6.3mm Guitar Input
8. 6.3mm Mic Input
9. AC Power Port

General Instructions :

- Turn ON the power switch to power ON the speaker.
- Single press the Bass button to enable or disable the X Bass EQ Mode.
- Single press the RGB Mode button to switch between different lighting modes. Long press to enable/disable MIC priority mode.
- Single press the mode button to switch between BT/AUX/FM/USB. Long press to enable or disable karaoke maker.
- Single press the Previous channel/Track button for the previous sound track or radio station.
- Single press the Next channel/Track button for the next sound track or radio station.
- Single press the Play/Pause button to play or pause sound tracks in BT/USB mode. Long press to Disconnect/Reconnect Bluetooth. Single press

to Mute/Unmute in AUX/FM mode. Long press to auto scan and save stations in FM mode.

BT Mode :

Switch on the speaker to BT mode, scan for nearby BT devices in your device. Tap on iBall PartyRiot 410 to connect.

USB Mode :

Insert the USB Drive to the USB port, the speaker will detect the USB Drive and the audio file will be played automatically.

AUX-IN :

The speaker can be connected to an device a AUX cable (3.5 mm) connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The tracks from the audio source can be heard through the speaker.

TWS Function :

Turn On the Two iBall PartyRiot 410 speakers you want to pair. Single press the TWS mode button and make sure both the speakers are in BT mode. After a few seconds, both the speakers will be connected successfully. Now search for nearby device in your mobile and tap on the BT name "iBall PartyRiot 410" to connect.



ISO 9001:2015 Certified Company
Since 2001 | www.iball.co.in