

LAMINIX A31

Thermal Laminator



Ba11



User Manual

Designed For Excellence.

www.iball.co.in

Thank you for choosing the **LAMINIX A31 Thermal Laminator**. Please read this user manual carefully before operation and keep it for future reference.

NOTE :

- *Operate the machine with dry hands only.*
- *Allow the machine to preheat before laminating.*
- *Do not insert metal objects or foreign materials into the machine.*
- *Do not pull the pouch while laminating.*
- Please do not attempt to disassemble this product yourself, as it will result in voiding the warranty. For expert assistance, please contact our support team at 84400 45005 or feedback@iball.co.in


To review our complete warranty terms and conditions, please click the link below

[View Warranty Policy](#)

To find your nearest authorized service center, please click the link below

[Find a Service Center](#)

Product Description :

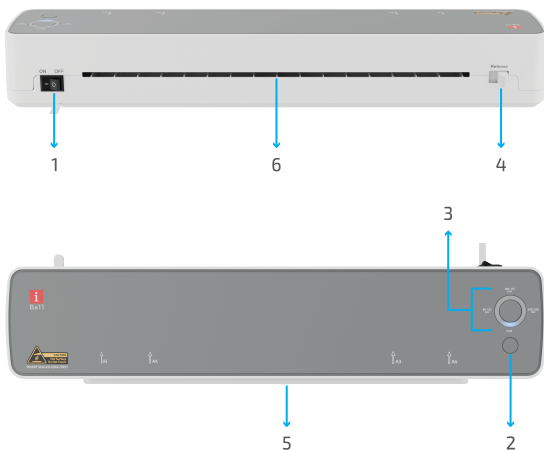

1. Power On/Off Switch
2. Mode Button
3. LED Indicator
4. Jam Release Switch
5. Sheet Entrance
6. Sheet Exit

How to Use: :

- Place the laminator on a flat and stable surface.
- Ensure there is sufficient space around the

machine and keep the surrounding area clear.

- Connect the power cord to a suitable power socket and switch on the power supply.

- Turn the laminator's ON/OFF switch to the ON position. By default, the laminator starts in Cold Mode.

- Press the Mode button once to switch to the desired laminating mode:

- Cold
- 80-125 Mic
- 150-175 Mic
- 200-250 Mic

Note : *The corresponding blue LED will blink to indicate the selected mode.*

- The selected mode LED indicator will flash while the machine is preparing.

- When the LED indicator stops flashing and glows steadily, the laminator is ready for use.

- Place the document inside a laminating pouch.

- Insert the pouch into the laminator from the sealed side .

- Allow the pouch to pass through the machine automatically. Do not pull or force the pouch during laminating.

- Remove the laminated document from the exit slot and place it on a flat surface to cool.

Cold Lamination :

1. Ensure the laminator is cool before using Cold Mode.
2. If you have just completed hot lamination, allow the machine to cool down completely.
3. Press the Mode button and select Cold mode.
4. Wait until the Cold mode blue LED glows steadily.
5. Place the document inside the cold laminating pouch.
6. Insert the pouch into the laminator and allow it to pass through automatically.
7. Remove the laminated document from the exit slot.

Hot Lamination :

1. Press the Mode button to select the desired pouch thickness **(80-125 Mic, 150-175 Mic, or 200-250 Mic)**.
2. The corresponding LED indicator will flash while the laminator is heating.
3. Wait until the selected mode blue LED stops flashing and glows steadily.
4. Place the document inside the laminating pouch.
5. Insert the laminating pouch into the machine.
6. Allow the pouch to pass through the laminator automatically.

***Note:** The laminator takes below 1 minute to become ready after power-on.*

Jam Release Function :

When the inserted laminating pouch is jammed, slide the jam release switch and remove the pouch gently from the rollers.

Auto Power-Off :

To save energy, the laminator automatically turns off after 60 minutes of inactivity.

Maintenance :

- Switch off and unplug the laminator after use.
- Allow the machine to cool completely before cleaning or storing.
- Ensure laminating pouches are clean and free from dust before use.
- Use the laminator in a dry environment only.

Tips for Best Laminating Results :

For optimal laminating performance, follow these recommendations:

- Ensure the laminating pouch is clean and free from dust, dirt, or wrinkles before use.
- Place the document in the center of the pouch and feed it straight into the laminator to prevent misalignment.
- Use a better-quality laminating pouch.

Troubleshooting :

PROBLEM/ TROUBLE	POSSIBLE CAUSE	SOLUTION
No control panel illumination	Machine not switched on	Switch on machine at rear next to plug inlet and at the wall socket
Pouch does not completely seal the item	Item maybe too thick to laminate	Check pass through thickness is correctly selected and pass through again
	Temperature maybe incorrect	Check pouch thickness is correctly selected and pass through again
Pouch has waves or bubbles	Temperature setting maybe incorrect	Check pouch thickness is correctly selected and pass through again
Pouch is lost in the machine	Pouch is jammed	Slide jam release switch, the laminating pouch film will pull out.
jamming	Pouch is jammed	
	Pouch was used 'open end' first	
	Pouch was not centered on entry	
	Pouch was not straight upon entry	
	Empty pouch was used	

Features :

- Multi-Size Support (A3/A4/A5/A6)
- 80-250 Micron Compatibility
- Bubble & Wrinkle Free
- Dual Roller
- Max 1mm Thickness
- Anti-Jam Release Lever
- High Speed 350mm/min
- Quick Warm-Up
- Supports Cold Lamination
- Overheat NTC Protection
- Auto Shut Down*
- LED Status Indicator

**When not in use more than 60 mins*

Specification :

Model	: iBall Laminix A31
Max. Power Consumption	: 1200W
Max. Laminating Width	: 330mm
Max. Lamination Thickness	: 1mm
Max. Paper Thickness	: 0.5mm
Min-Max. Pouch Thickness	: 80-250 Microns
Lamination Type	: Thermal Pouch
Max. Laminating Speed	: 350mm/min

Heating System	: Quartz Tube
Min-Max Temperature	
Controller	: 80-180°C
No. of Rollers	: 2nos.
Roller Diameter	: 18mm
Warm-up Time	: 1 min
Supported Paper Sizes	: A3/A4/A5/A6
Cable Length	: 1.2m
Product Dimension	: 47.4 x 10.1 x 6.8cm (W x D x H)
Net.Weight	: 2kg

Package Contents :

Laminator	: 1 U
QR Code Guide	: 1 U



ISO 9001:2015 Certified Company
Since 2001 | www.iball.co.in