

# **PARTYRIOT 611**

Boombox



Ba11



## **User Manual**

*Designed For Excellence.*

[www.iball.co.in](http://www.iball.co.in)

Thank you for choosing **PartyRiot 611 Boombox**. Please read the user manual carefully before operation and save this user manual for further reference.

**Note :**

- *Please charge the product with power cord connected to the power supply output rated voltage of AC 220 - 240V 50/60Hz.*
- *Avoid the usage of this product at the high temperature and high humidity environment.*
- Please do not attempt to disassemble this product yourself, as it will result in voiding the warranty. For expert assistance, please contact our support team at 84400 45005 or [feedback@iball.co.in](mailto:feedback@iball.co.in).

**To review our complete warranty terms and conditions, please click the link below**

***[View Warranty Policy](#)***

**To find your nearest authorized service center, please click the link below**

***[Find a Service Center](#)***

## Features :

- Max. 5h\* Playtime
- Aural Sphere - 360°Audio
- 16.51cm Floating Woofer
- 5X Driver
- Bottom Bass Reflex
- X Bass EQ
- True Wireless Duo (TWS)
- Supported Inputs (BT v5.4 | USB | AUX | MIC)
- 6.3mm Mic Input
- 4 RGB LED Modes
- Carry Handle
- Wireless Mic

## Specifications :

Driver Size

MidRange : 6.6 cm x 4

Woofer : 16.51 cm

Impedance

MidRange : 3Ω

Woofer : 4Ω

Frequency Response : 45Hz - 20kHz

S/N Ratio : >72dB

File Format Support(USB) : MP3

Line Input : 3.5mm Jack

Max Supported

Memory Size (USB) : 32GB


|                   |                                        |
|-------------------|----------------------------------------|
| Charging Time     | : 3h                                   |
| Playback Time     | : 5h*                                  |
| BT Name           | : iBall PartyRiot 611                  |
| BT Version        | : v5.4                                 |
| Product Dimension | : 25.8 x 25.7 x 57.2 cm<br>(W x D x H) |
| Net Weight        | : 5.19 kg                              |

*\*At 70% volume and LED Off, Playtime will vary based on the user, music preference and volume level.*

**Package Contents :**

|               |       |
|---------------|-------|
| Speaker       | : 1 U |
| Wireless Mic  | : 1 U |
| Input Cable   | : 1 U |
| Power Cord    | : 1 U |
| QR Code Guide | : 1 U |

Product Descriptions :

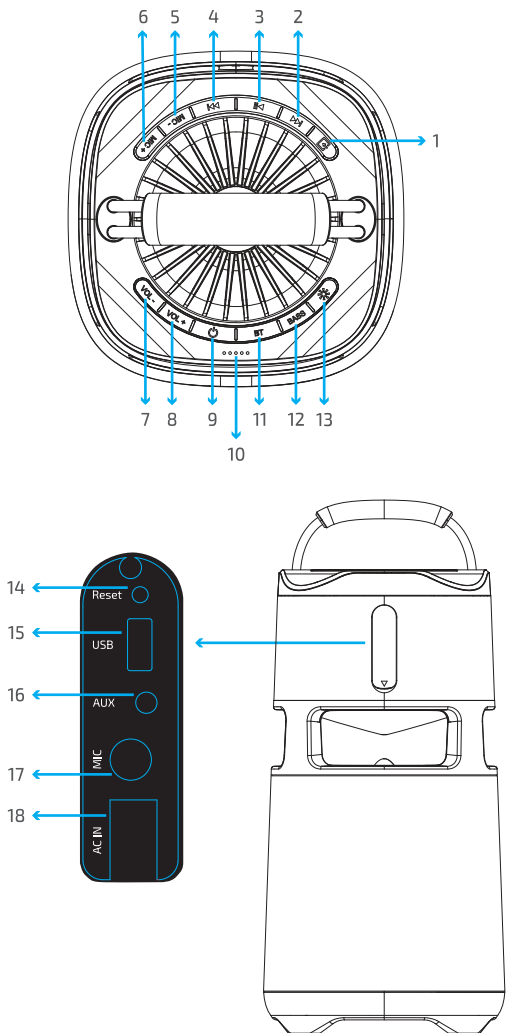

1. Mode Button
2. Previous Track Button
3. Play / Pause Button
4. Next Track Button
5. Mic Volume -
6. Mic Volume +
7. Master Volume -
8. Master Volume +
9. Power Button
10. Battery Level Indicator
11. BT Button
12. X Bass Button
13. RGB Mode Button
14. Reset
15. USB Port
16. AUX IN
17. 6.3mm Mic Input
18. AC Power Input

### **General Instructions :**

- Long press the Power Button to turn ON/OFF the Speaker.
- Single press the Bass Button to enable or disable the X Bass EQ Mode.
- Single press the Mode Button to switch between different input sources (BT/AUX/USB).
- Single press the Previous Track Button to play the Previous Track.
- Single press the Next Track Button to play the Next Track.

- Single press the Play/Pause Button to play or pause the track in BT/USB Mode. Single press to Mute/Unmute in AUX Mode.
- Short press the BT Button to switch to BT Mode. Long press to Disconnect/Reconnect BT. Double press to Enter/Exit TWS Mode.
- Short press the MIC- Button to decrease the Microphone Volume and Long press to rapidly decrease the Microphone Volume.
- Short press the MIC+ Button to increase the Microphone Volume and Long press to rapidly increase the Microphone Volume.
- Short press the Vol+ Button to increase the Speaker Volume.
- Short press the Vol- Button to decrease the Speaker Volume.
- Battery Level Indicator : LEDs indicate the charging level at 20%, 40%, 60%, 80%, and 100% progressively.
- Single press the RGB Mode Button to switch between different Lighting Modes.

***Tips :** If the speaker is in standby mode (no BT device connected), short pressing the RGB Mode Button will not change the lighting mode.*

## **BT Mode :**

Switch on the speaker and press the BT Button to enter Pairing Mode. The blue LED will **Blink Rapidly**. On your BT Device, select “iBall

**PartyRiot 611"** to connect. Once connected, the blue LED will glow steadily.

### **USB Mode :**

Insert the USB Drive to the USB port, the speaker will detect the USB Drive and the audio file will be played automatically.

### **AUX-IN :**

The speaker can be connected to an device a AUX cable (3.5 mm) connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The tracks from the audio source can be heard through the speaker.

### **TWS Function :**

1. Turn on both **iBall PartyRiot 611** speakers and switch them to BT Mode.
2. Double-press the BT Button on either speaker to enter TWS Pairing Mode.
3. Wait a few seconds until both speakers are connected.
4. On your mobile, search for nearby BT Devices and select "**iBall PartyRiot 611**" to connect.



ISO 9001:2015 Certified Company  
Since 2001 | [www.iball.co.in](http://www.iball.co.in)