

CINEBAR-100

Soundbar



Ba11




User Manual

Designed For Excellence.

www.iball.co.in

Thank you for choosing **CINEBAR 100 soundbar**. Please read the user manual carefully before operation and save this user manual for further reference.

WARNING

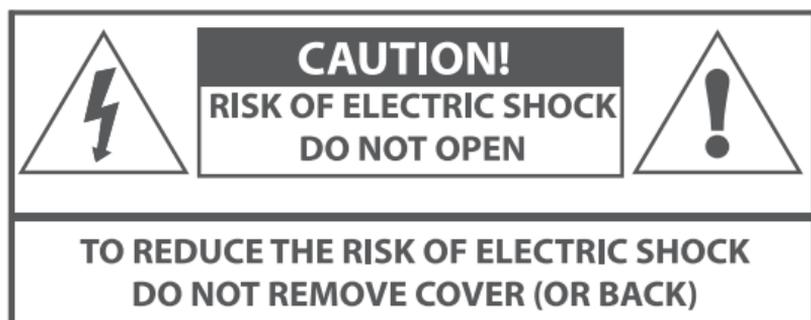

Caution :

- To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user - serviceable arts inside.
- Refer servicing to qualified personnel only. *Avoid self-disassembly of the speaker, Kindly approach our service team with reference to the following link for service support :*

Warranty Policy

The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient

magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.



IMPORTANT SAFETY INSTRUCTIONS :

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for longtime periods or a sudden high volume level.




2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.
3. The appliance is not intended to be operated by means of an external timer or separate remote control system.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The apparatus must not be exposed to dripping or splashing liquid, no objects filled with liquids such as vases, should be placed on the apparatus.
8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.
9. Do not position this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong magnetic field.

11. Do not place the unit on a amplifier or receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.
14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.
16. The mains plug is used to disconnect the device, the disconnected device should remain readilyoperable.

Power Source:

This soundbar is designed to operate in AC 220V - 240V 50/60Hz.

**Product representation :
Soundbar and Sub-Woofer :**

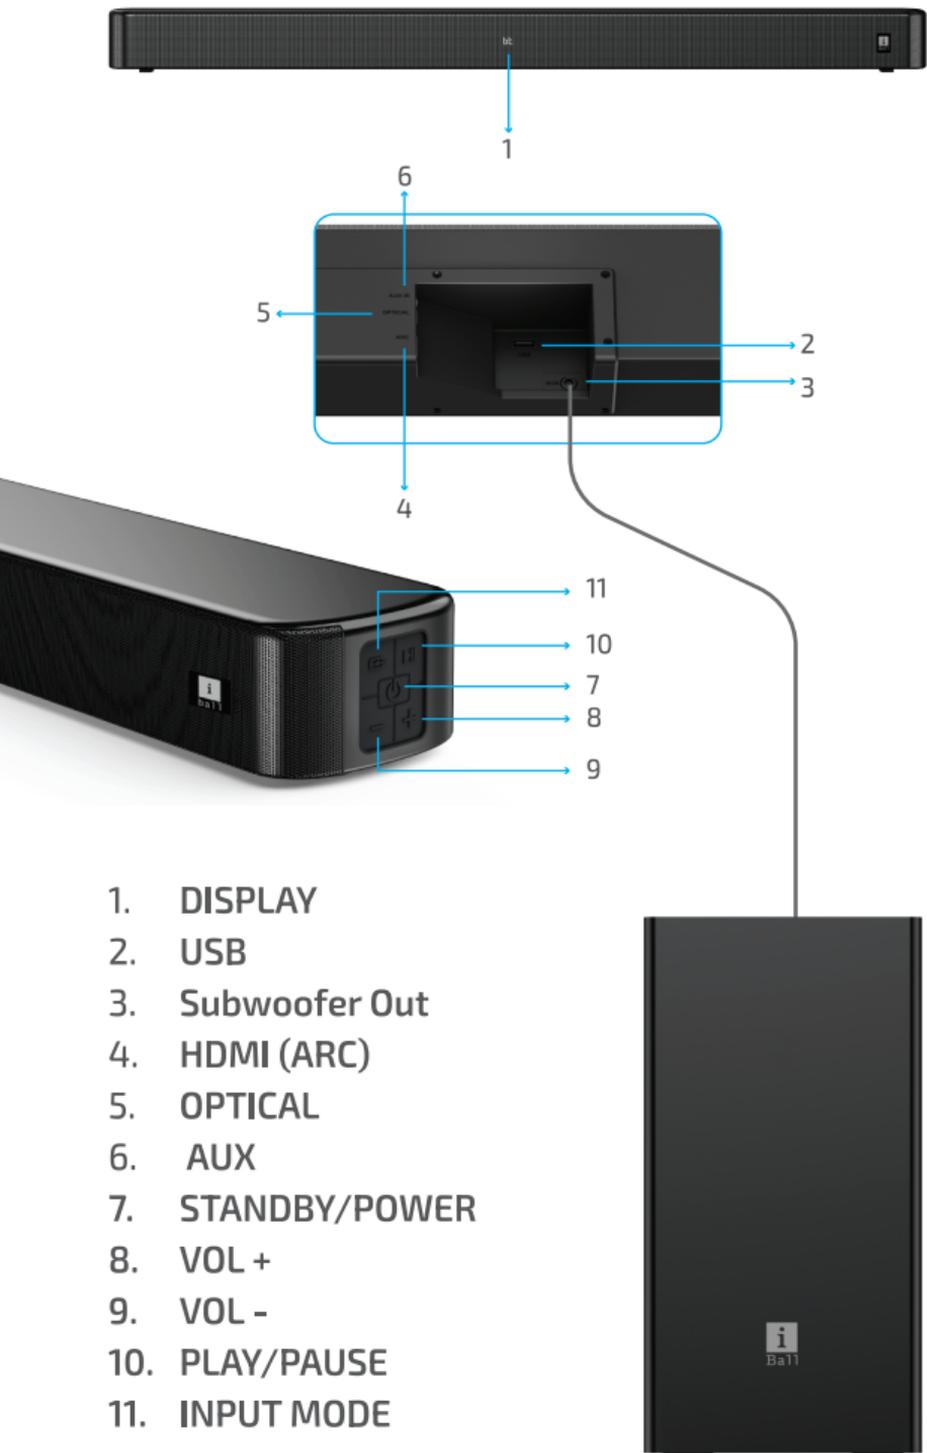



Remote Control :



Positioning the soundbar :

Place on a flat Surface :



Place the sound bar horizontally on a flat surface such as a TV unit or shelves and align it centrally with the TV screen. Allow some space between the speaker and the wall. Don't place inside a cabinet or on a walled shelf. Follow this guidance for best sound output and good airflow around the sound bar.

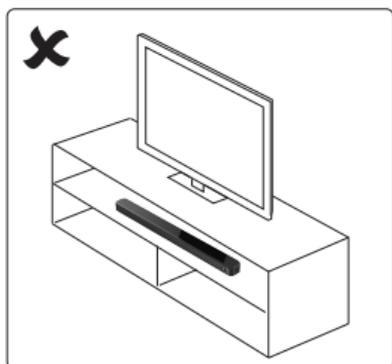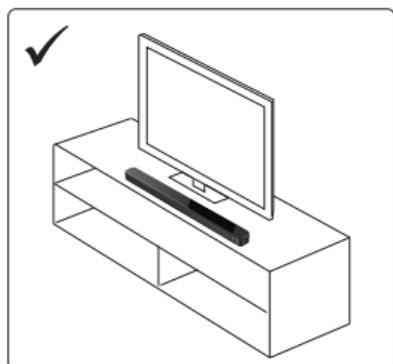

Mount on the wall :




WARNING : If you don't feel confident to correctly and securely wall-mount the sound bar, Seek the assistance of an experienced person or professional.

Install the speaker on a vertical, fast, reinforced area of wall. For plaster walls, it is recommended to screw into wall studs for greater security. For optimum performance, allow at least 25mm/1" distance between the sound bar and the TV.

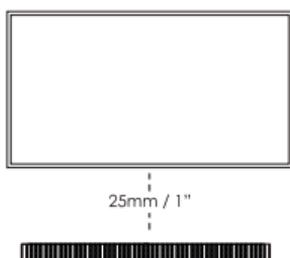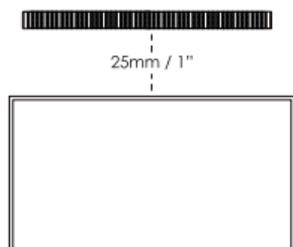

Follow below steps to mount the sound bar on the wall :

1. Make 2 holes on the wall with distance same as the wall bracket on the soundbar.
2. Put the plastic anchors onto the wall and secure the screws to the plastic clip, do not tighten the screws all the way make sure leave some space.
3. Attached the 2 EVA pads onto the wall mount bracket. This will make sure that there is enough room between the wall and the soundbar outlet, minimum 15mm.
4. Once the screws securely fastened, hang the sound bar over by inserting the screws onto the wall mount bracket.

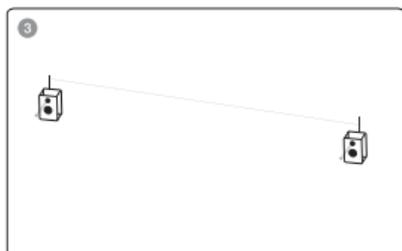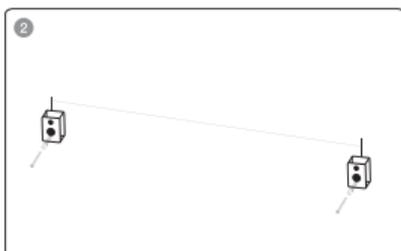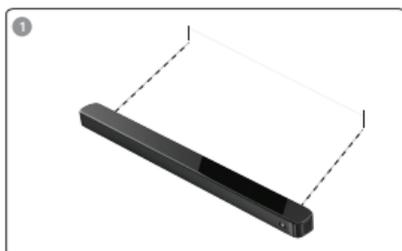

CONNECTIVITY PROCEDURE :

Setting the Soundbar :

1. Plug in the power cord and the display will light up (Standby mode).
2. Switch on the soundbar by using power button on soundbar or by using STANDBY button on remote. After switching on, the default input mode will appear on display.
3. Input mode can be changed by pressing the power button again or by using the INPUT button on remote.
4. Below are input mode names appearing in the soundbar display:

bt	:	BT Pairing Mode
Hd	:	HDMI (ARC) Mode
USb	:	USB Mode
AUX	:	AUX Mode
OPt	:	Optical mode

Playing Audio via BT Connection :

1. Turn on sound bar and then short-press the input button to switch to BT mode and the LED will show bt.
2. Activate the pairing function on your phone or other compatible device and select "iBall Cinebar 100".
3. When successfully paired, you will hear a tone and the LED Display will stay on.
4. The remote control includes BT mode playback controls.

Playing Audio via USB Port :

The sound bar automatically switches to USB input mode with the LED display (USB) when a USB flash drive is inserted (this mode isn't selectable on the sound bar or remote control unless a USB flash drive is connected).

1. Ensure that your USB flash drive contains MP3 audio files (other file types not supported).
2. Connect the USB flash drive to the USB port on the sound bar (or your own USB extension cable connected to the USB port); music will automatically play.

Audio input (AUX) Connection :

1. Connect the sound bar to your PC, tablet, smartphone, TV, or other device using the included audio cable. Short-press the input button to switch to audio input mode with the LED Display lit up (AUX).
2. In this mode, playback can only be controlled on your connected device.

HDMI (ARC) Mode :

1. The Soundbar supports HDMI with Audio Return Channel (ARC). If your TV is HDMI ARC compliant, you can hear the TV audio through your Soundbar by using a single HDMI cable.
2. Using a High Speed HDMI cable, connect the HDMI (ARC) connector on the soundbar to the HDMI ARC connector on the TV. The HDMI ARC connector on the TV might be labelled differently.

For details, see the TV user manual.

Optical Mode :

1. Press the Input button on the remote control to select optical mode.
2. Connect the optical cable to the optical digital output of your TV.
3. Set the connected TV to "PCM Stereo" or "Stereo 2.0".

Features :

- 220W RMS Power
- 16.5 cm Deep Bass
- Quad Drivers Soundbar
- Connectivity : BT v5.3 | TV (ARC) | Optical In | USB | AUX
- Premium Gloss Finish
- Front LED Display
- Wall - Mount Ready
- Remote control
- AuralSphere

Specification :

BIS Name	: Cinebar-100
Output Power (RMS)	
Subwoofer	: 110W
Soundbar	: 110W
Total	: 220W
Driver Size	
Subwoofer	: 16.5 cm x 1
Soundbar	: 5.08 cm x 4
Impedance	
Subwoofer	: 4 Ω
Soundbar	: 8 Ω
Frequency Response	: 45Hz - 20kHz
S/N Ratio	: \geq 70dB
Separation	: \geq 45dB
File format support	: MP3 (USB)

Line input	: TV (ARC) Optical AUX
Max Supported	
USB memory size	: 32GB
BT Name	: iBall CineBar 100
BT Version	: 5.3
Product Dimension (W x D x H)	
Subwoofer	: 19 x 30.5 x 37.5 cm
Sound bar	: 85 x 11 x 6.5 cm
Net.Weight	
Subwoofer	: 4.4 kg
Sound bar	: 2.1 kg
Total	: 6.5 kg

Package Contents :

Sound Bar	: 1 U
Subwoofer	: 1 U
Input Cable	: 1 U
Remote	: 1 U
Quick Start Guide (QR)	: 1 U
Wall Mount Kit	: 1 U



ISO 9001:2015 Certified Company
Since 2001 | www.iball.co.in