

CINEBAR-140 Soundbar



Ba11




User Manual

Designed For Excellence.

www.iball.co.in

Thank you for choosing **CINEBAR 140 soundbar**. Please read the user manual carefully before operation and save this user manual for further reference.

WARNING

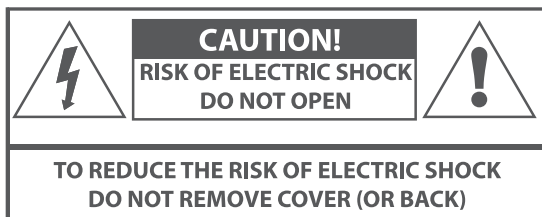

Caution :

- To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user - serviceable arts inside.
- Refer servicing to qualified personnel only. *Avoid self-disassembly of the speaker, Kindly approach our service team with reference to the following link for service support :*

Warranty Policy

The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient

magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.



IMPORTANT SAFETY INSTRUCTIONS :

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.


1. To prevent possible hearing damage, do not listen at high volume levels for longtime periods or a sudden high volume level.



2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.
3. The appliance is not intended to be operated by means of an external timer or separate remote control system.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The apparatus must not be exposed to dripping or splashing liquid, no objects filled with liquids such as vases, should be placed on the apparatus.
8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.
9. Do not position this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong magnetic field.

Product Representation :

Top Control Panel :

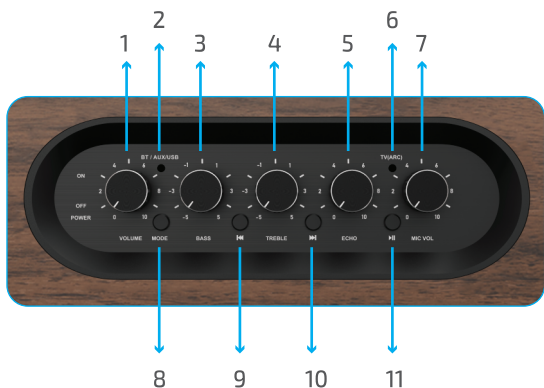


1. Power On/Off & Master Volume Knob
2. LED Indicator
 - Blue - BT
 - Green - Aux
 - Cyan - USB
3. Bass Adjustment Knob
4. Treble Adjustment Knob
5. Mic Echo Adjustment Knob
6. TV (ARC) Mode Indicator
7. Mic Volume Adjustment Knob
8. Input Mode Button
9. Previous Track
10. Next Track
11. Play/Pause

Back Control Panel :



- 1. AC220-240V Power Input
- 2. USB
- 3. TV (ARC)
- 4. 2CH AUX In
- 5. Microphone Input 6.3mm

Remote Control :

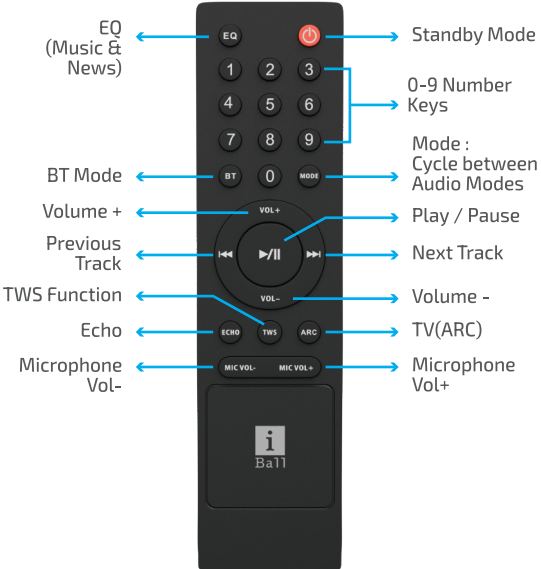

CONNECTIVITY PROCEDURE :

Playing Audio via BT Connection :

1. Turn on sound bar and then short-press the input button to switch to BT mode and the Blue LED indicator will blink rapidly.
2. Activate the pairing function on your phone or other compatible device and select "iBall Cinebar 140".
3. When successfully paired, you will hear a tone and the Blue indicator will stay on.

Playing Audio via USB Port :

The sound bar automatically switches to USB input mode when a USB flash drive is inserted (this mode isn't selectable on the sound bar or remote control unless a USB flash drive is connected).

1. Ensure that your USB flash drive contains MP3 audio files (other file types not supported).
2. Connect the USB flash drive to the USB port on the sound bar (or your own USB extension cable connected to the USB port); music will automatically play.

Audio input (AUX) Connection :

1. Connect the sound bar to your PC, tablet, smartphone, TV, or other device using the included audio cable, short-press the input button to switch to audio input mode with the Green LED indicator.
2. In this mode, playback can only be controlled

on your connected device.

HDMI (ARC) Mode :

1. The Soundbar supports HDMI with Audio Return Channel (ARC). If your TV is HDMI ARC compliant, you can hear the TV audio through your Soundbar by using a single HDMI cable.
2. Using a High Speed HDMI cable, connect the HDMI (ARC) connector on the soundbar to the HDMI ARC connector on the TV. The HDMI ARC connector on the TV might be labelled differently. For details, see the TV user manual.
3. Make sure to set the connected TV Audio Digital output settings to PCM Stereo or Stereo 2.0 or Auto.

Features :

- 100W RMS Power
- Dual Full Range Drives
- Dual Tweeters
- Turn & Tune Knobs
- Connectivity : BT v5.3 | TV (ARC) | USB | AUX
- Premium Wooden Body
- Compact Soundbar

Specification :

Output Power (RMS)	: 100 W
Driver Size	
Fullrange	: 7.62 cm x 2
Tweeter	: 5.08 cm x 2
Impedance	: 4Ω
Frequency Response	: 55Hz - 18KHz
S/N Ratio	: ≥80dB
Separation	: ≥50dB
File format support	: MP3 (USB)
Line input	: TV (ARC) AUX
Max Supported	
USB memory size	: 32GB
BT Name	: iBall CineBar 140
BT Version	: 5.3
Product Dimension	
(W x D x H)	: 52 x 16.5 x 7.5 cm
Net.Weight	
Sound bar	: 3.25 kg
Total	: 3.25 kg

Package Contents :

Sound Bar	:1 U
Remote	:1 U
Power Cord	:1 U
Input Cable	:1 U
HD Cable	:1 U
Quick Start Guide (QR)	:1 U



ISO 9001:2015 Certified Company
Since 2001 | www.iball.co.in