

IMPACT PLUS 2

PRESENTATION POINTER



User Manual

Designed For Excellence.

www.iball.co.in

Thank you for choosing **Impact Plus 2**. Please read the user manual carefully before operation and save this user manual for further reference.

NOTE:

- *Do not disassemble, bump, crush or throw it into fire!*
- *If severe swelling occurs, do not continue to use it!*
- *Do not place it in a high temperature environment!*
- *Do not use the laser to directly illuminate on the eyes of people or animals!*

Please do not attempt to disassemble this product yourself, as it will result in voiding the warranty. For expert assistance, please contact our support team at 84400 45005 or feedback@iball.co.in

To review our complete warranty terms and conditions, please click the link below

[**View Warranty Policy**](#)

To find your nearest authorized service center, please click the link below

[**Find a Service Center**](#)

Features :

- 2.4GHz RF
- 100m LASER Throw
- Cross Platform Support
- Cursor Navigation Modes
- HyperLink Control
- Bright Red LASER
- 30m Wireless Range
- Media | Page Controls
- USB-A + Type-C Receiver
- Status LED


Specification :

Connectivity	: USB Receiver (2.4GHz)
LASER Emitter Class	: Class 2
LASER Color	: Red
Wavelength	: 630 - 650nm
No. of Buttons	: 8
Max. Output Power	: <1mW
Product Dimension	: 4.1 x 3 x 10.3 cm (W x D x H)
Net.Weight	: 37g


Package Contents :

Presentation Pointer	: 1 U
Receiver	: 1 U
QR Code Guide	: 1 U

Remote Inscription & Function :

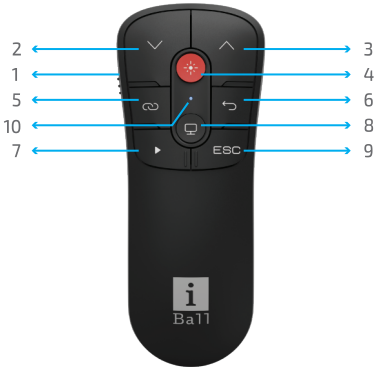

USB Receiver Placement

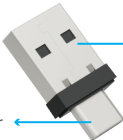

USB-A Type Receiver

Type-C Receiver

NO	Remote Inscription	Functions
01	Power Slide Button	Slide the button to Turn On/Off the presentation pointe
02	Page Down Button	Press the button to slide the Page down
03	Page Up Button	Press the button to slide the Page up
04	LASER Button	Hold this button to control the LASER pointer
05	HyperLink Button	If the presentation has HyperLinks just click to select the Hyperlinked websites or folders and double click to open it
06	Return Button	Press this button to back to PPT/Hyperlink
07	Full Screen Button	Press this button to get into Fullscreen in PPT
08	Desktop Button	Press this button to return to the Homescreen of the Desktop
09	ESC Button	Press this button to perform Escape action
10	LED Indicator	It shows the status of the LASER working indication
11	3 Input Modes	Press the up and down button at the same to change between three modes
		Mode 1 - Up and Down Arrow
		Mode 2 - Left and Right Arrow
		Mode 3 - Page up/ Page Down

Instruction for use :

- Insert the receiver into the computer with USB, after placing the batteries into the product, Open the PPT/Keynote/PDF file at same time, OK, to start the demonstration.
- If the product can be lit by laser but does not have the page-turning function, first insert the receiver into the USB interface of the computer, and then press and hold the page-turning button while moving the toggle switch to the ON position, the indicator light will blink and stop the association.
- Windows PPT uses Page Up/Page Down or the Up and Down arrows to control Page turning. Mac OS Keynote uses the left and right arrows to control Page turning. When switching function modes, press the Up and Down key for 2 seconds to switch functions.



ISO 9001:2015 Certified Company
Since 2001 | www.iball.co.in